


# EtherMPX Configuration Examples

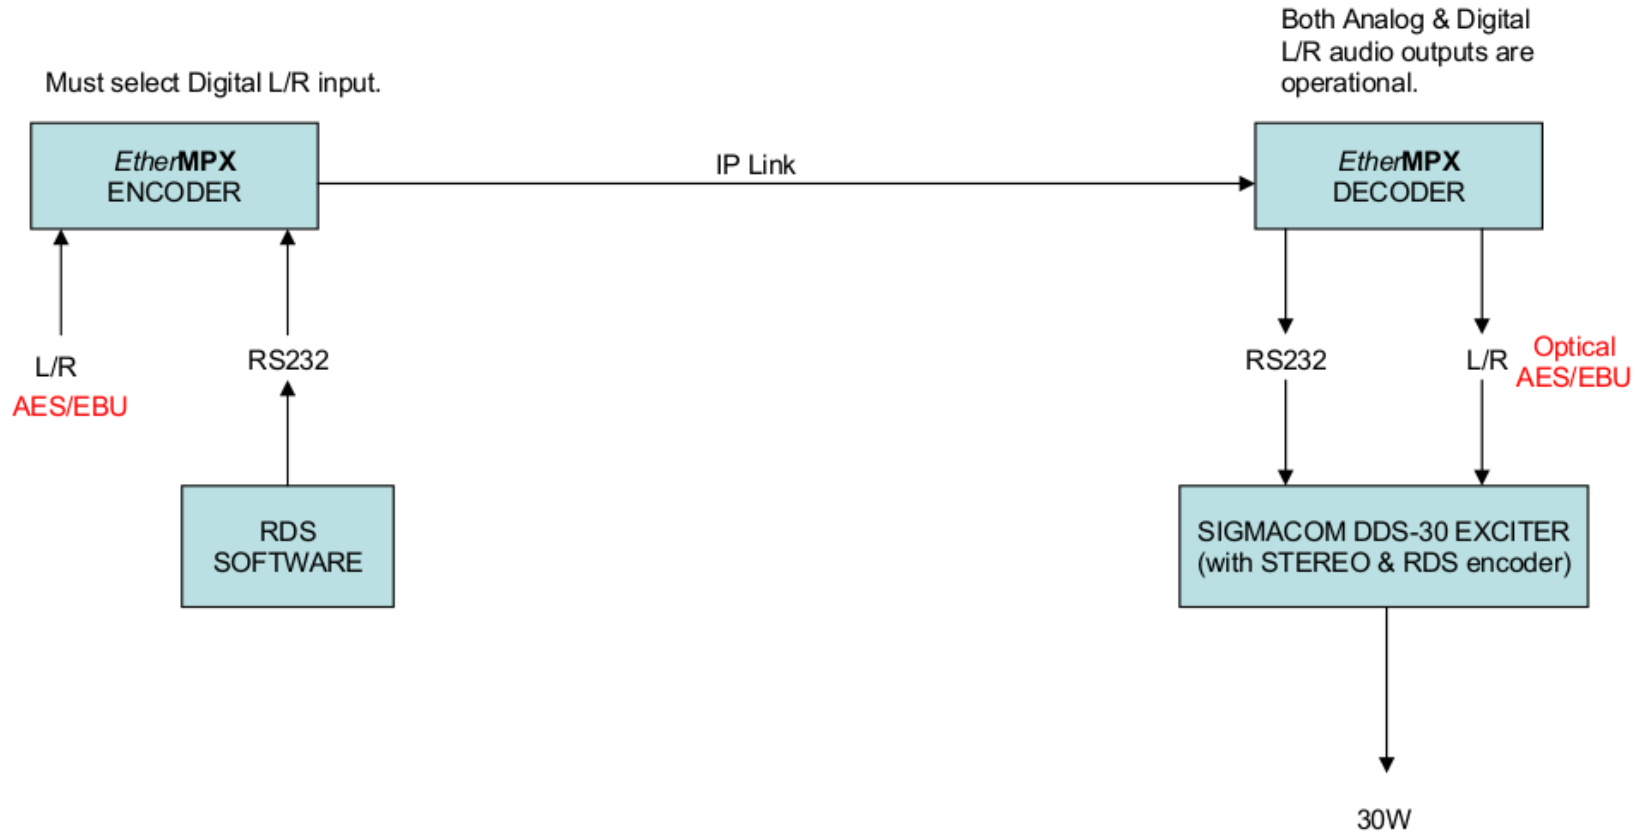

### Example 3:

Sending digital L/R and RDS information via RS232 to Sigmacom DDS-30 exciter (the exciter does the stereo and RDS encoding).