


## EtherMPX Configuration Examples

Must select once for  
Analog or Digital MPX input.

Both Analog & Digital  
MPX outputs are  
operational.

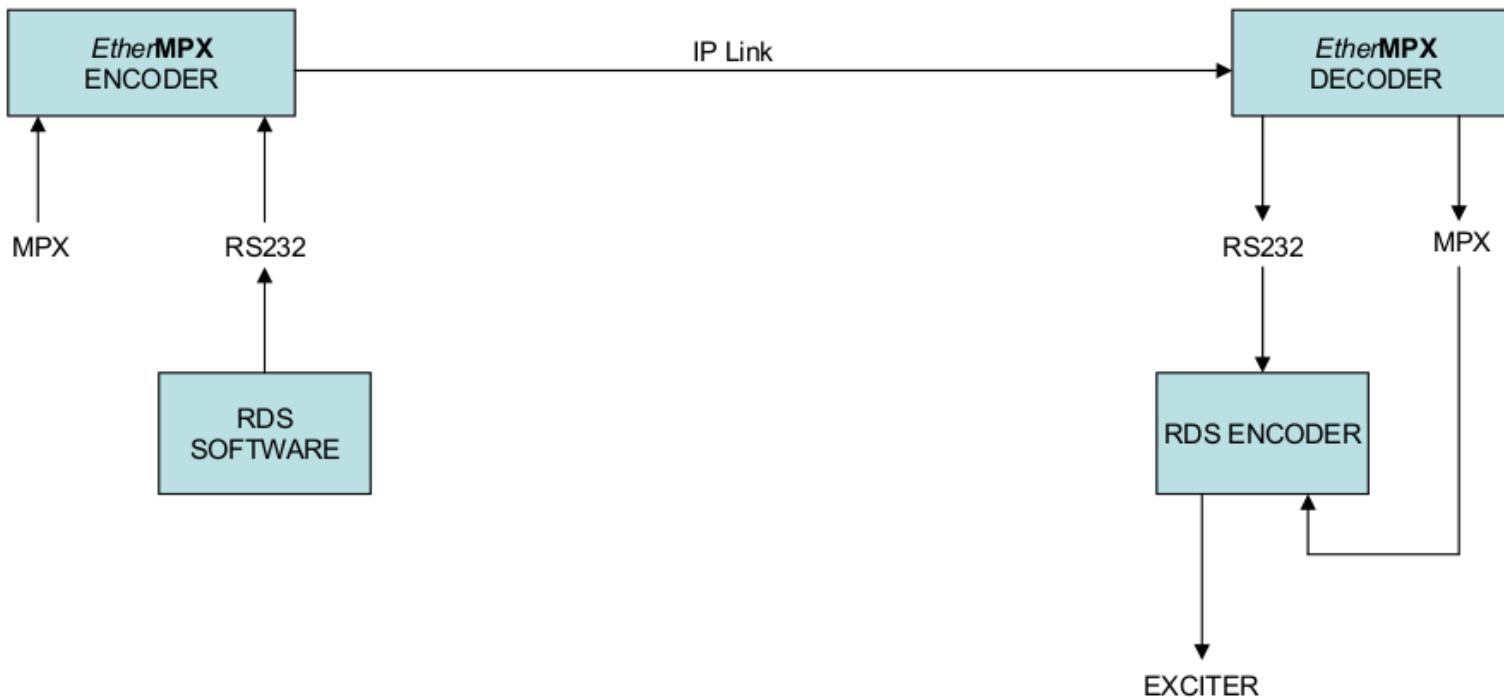

### Example 5:

Sending MPX (analog or digital), and RDS data.  
RDS encoder must be installed at transmitter site.